


Note

- 1. There is a hanger on three sides of the grill (SEE DETAIL 3).
- The control panel (face) of the accessories is wider than the cutout width, this conceals the cutout space on the left & right hand sides.
- 3. Clearance of 10" on each side, and 3" at the rear of the oven is recommended for unrestricted operation of accessories. (18" from combustible surroundings on each side and rear)
- Insulating liners must be used and are available for combustible surrounds. Double Side burner (3281), Single Side burner (3279-1) and Drop-In Side burner (3280) do not require an insulating liner (See page 6).



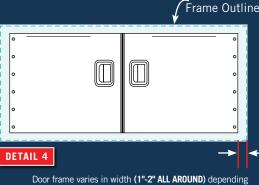

Door/Drawer

Door frame varies in width (1"-2" ALL AROUND) depending on the size & configuration of the door & drawer.

